

APPLICATIONS

- Perforating
- Plug / packer setting operations

FEATURES

- Utilize spinning collars

BENEFITS

- Avoid having to turn entire toolstring during makeup
- Available in all Hunting distribution warehouses worldwide

Quick Change Assemblies are typically used to connect collar locating tools with perforating guns or plug setting tools. By incorporating spinning collars, there is no need to rotate the full toolstring when connecting guns to the electrical cable head. Different types of electrical connections are available to suit the needs of particular operations.

HARDWARE SPECIFICATIONS

O.D. (in)[mm]	Assembly Part Number†	Contact Kit	Max. Temp.‡ (°F)[°C]	Max. Pressure (psi)[MPa]	Max. Voltage (VDC)	Max. Current (mA)	Max. Tension (lbf)[kN]	Upper Head Connection	Lower Head Connection
2-3/4 [70]	0271-100-040	0256-100-032	400 [204]	20,000 [138]	600	2,000	126,000 [560]	1-5/8"-6 Acme Pin	2-3/8"-6 Acme GO Box
	0260-100-040	0260-100-032					126,000 [560]	1-5/8"-6 Acme Pin	2-3/8"-6 Acme SIE Box
3-1/8 [79]	0256-100-040	0256-100-032	400 [204]	20,000 [138]	600	2,000	126,000 [560]	1-5/8"-6 Acme Pin	2-3/4"-6 Acme GO Box
	0256-000-070	0256-000-052					126,000 [560]	1-3/16"-12 GO Box	2-3/4"-6 Acme GO Box
	0260-100-000	0260-100-032					126,000 [560]	1-5/8"-6 Acme Pin	2-3/8"-6 Acme SIE Box

† Detonator blocks, firing head seal blocks and contact block assemblies need to be purchased separately


‡ Viton O-rings need to be used above 325°F (163°C)

ACCESSORIES

O.D. (in)[mm]	Detonator Block		Firing Head Seal Block Teardrop Connection§
	Block	Pig Tail Assembly	
2-3/4 [70]	0271-000-013	0256-000-010	0271-000-020
3-1/8 [79]	0256-000-013	0256-000-010	0256-000-020

§ Contact kit 3903-000-002

Detonator blocks and firing head seal blocks are used to house electrical connections to the firing head inside the GO style Quick Change Assembly. Pig tail and teardrop connection types are available.

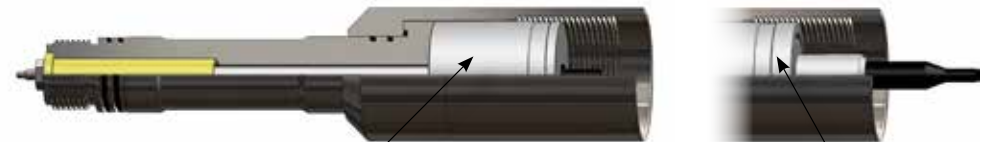


Detonator block with pig tail assembly

Firing head seal block with teardrop connection



SIE style Quick Change Assemblies utilize a contact block assembly (0260-000-040) that accepts connections to firing heads using blasting plug assemblies.

Type	Part Number	Contact Kit	Thread
Contact nut with contact eyelet	0330-000-080	0330-000-082	1" – UNC-2A
Contact nut with button	0330-000-180	0330-000-182	1" – UNC-2A
Acorn nut with teardrop connector	0330-000-190	0330-000-192	1" – UNC-2A

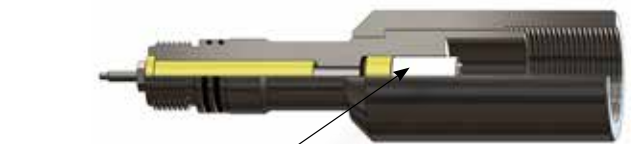

Contact block assembly 0260-000-040 (Contact kit 0260-000-041)